

Installation and Assembly - Projector Adapter Plate for Sony™ VPL-PX40 SuperBright Projector

Models: PAP 171, PAP 171-S,
PAP 171-W

IMPORTANT! Read entire instruction sheet before you start installation and assembly.


Before you start check the parts list below to make sure all of the parts shown are included.

⚠ WARNING

- Installer must verify that the ceiling will safely support four times the combined weight of all attached equipment and hardware.

Parts List


Description	Qty.	PAP 171	PAP 171-S	PAP 171-W
AA adapter plate	1	055-1315	055-4315	055-2315
BB M5 x 20 mm serrated washer head socket pin screw	3	510-1065	510-2065	510-2065
CC .240 x .375 x .562H retaining spacer	3	590-1135	590-2135	590-2135
DD 4 mm security allen wrench (for PAP only)	1	560-9646	560-9646	560-9646

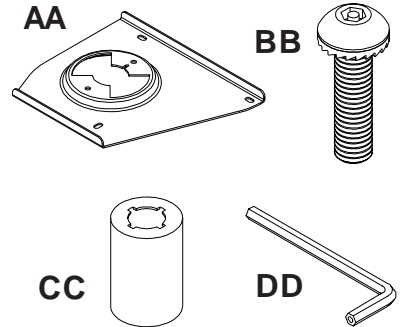

Note: Actual parts may appear slightly different than illustrated.

*Notch indicates front of projector.

- 1 Flip projector upside down. Fasten adapter plate (**AA**) using three 20 mm serrated washer head socket pin screws (**BB**) and three retaining spacers (**CC**) as shown. Tighten screws (**BB**) using security allen wrench (**DD**).

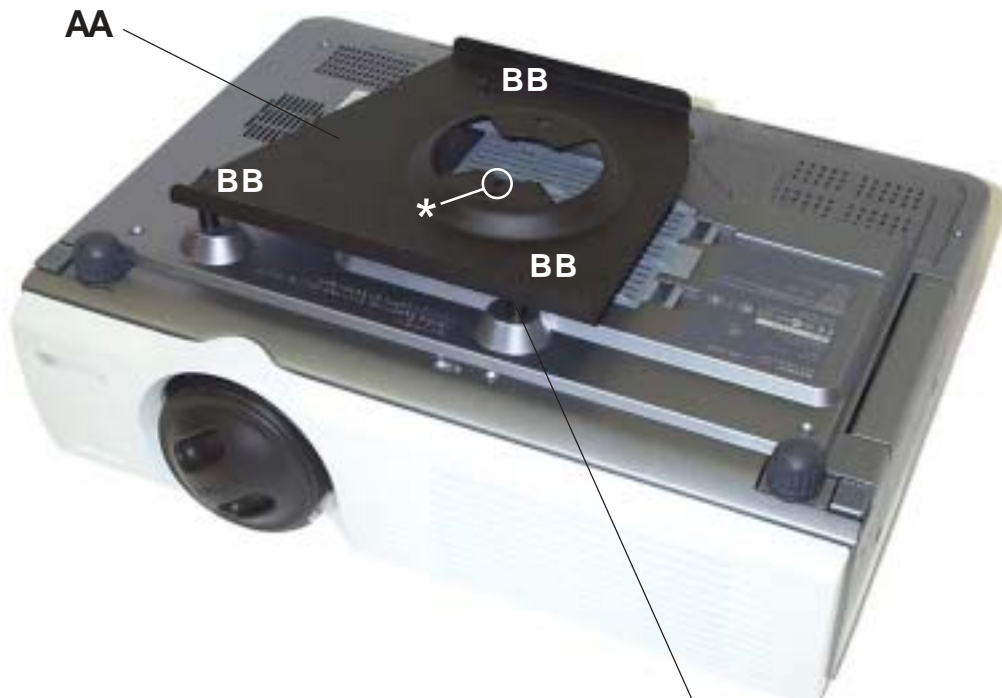

Spacers (**CC**) go between adapter plate and projector.

