

Installation and Assembly - Projector Adapter Plate for Dell™ 1800MP and Optoma™ EzPro 737 Projector

Models: PAP 168, PAP 168-S, PAP 168-W

IMPORTANT! Read entire instruction sheet before you start installation and assembly.

Before you start check the parts list below to make sure all of the parts shown are included.

⚠ WARNING

- Installer must verify that the supporting surface will safely support the combined weight of all attached equipment and hardware.


Parts List

Description

Qty. black silver white


AA adapter plate	1	055-1309	055-4309	055-2309
BB M3 x 10 mm serrated washer head socket pin screw	2	510-1086	510-2086	510-2086
CC M3 x .8 x 20 mm thumb screw	1	560-1149	560-7149	560-7149
DD spacer	2	540-9455	590-0108	590-0108
EE retaining spacer	1	590-1143	590-2143	590-2143
FF 2 mm security allen wrench	1	560-1097	560-1097	560-1097

Note: Actual parts may appear slightly different than illustrated.

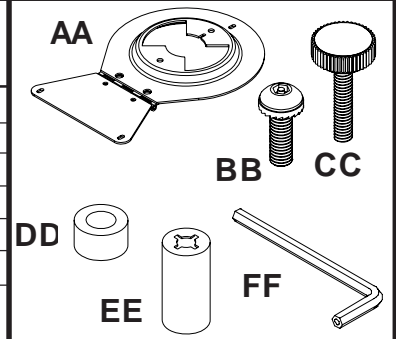


- 1 Flip projector upside down. Fasten adapter plate (**AA**) using two spacers (**DD**) and two M3 x 10 mm screws (**BB**) with 2 mm security allen wrench (**FF**) as indicated below.

- 2 *Notch indicates front of projector. Place retaining spacer (**EE**) on remaining hole on projector. Then close adapter plate (**AA**) and fasten with thumb screw (**CC**).

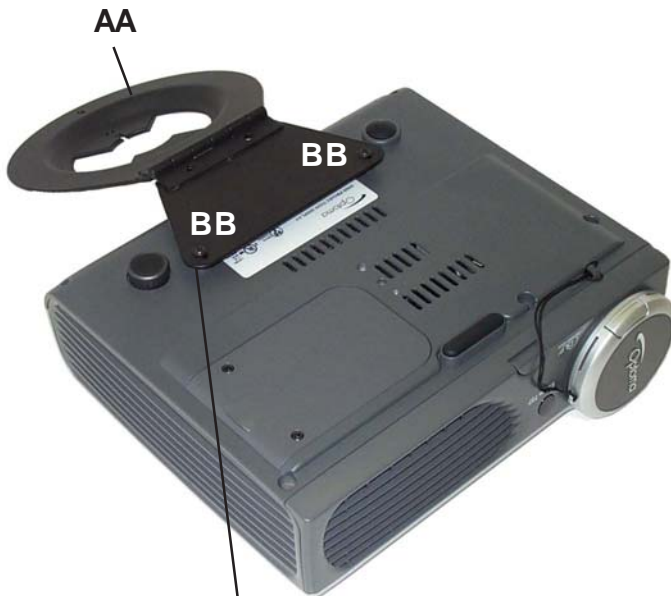

Spacers (**DD**) go between adapter plate and projector.

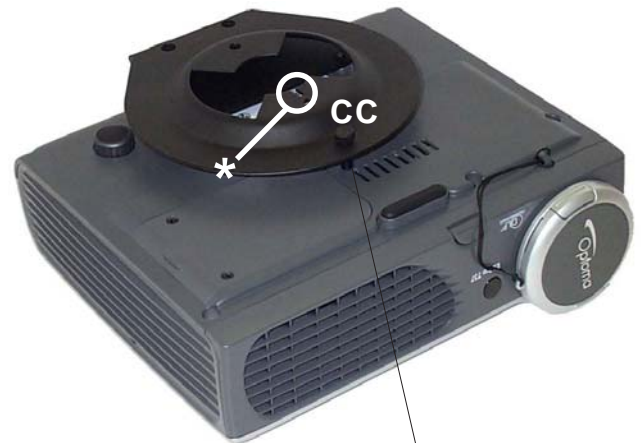

Retaining spacer (**EE**) goes between adapter plate and projector.

