

Installation and Assembly - Projector Adapter Plate for Proxima™ DP4800x Projector

Models: PAP 210, PAP 210-S, PAP 210-W

IMPORTANT! Read entire instruction sheet before you start installation and assembly.

Before you start check the parts list below to make sure all of the parts shown are included.


⚠ WARNING

- Installer must verify that the ceiling will safely support four times the combined weight of all attached equipment and hardware.

Parts List

Description	Qty.	PAP 210	PAP 210-S	PAP 210-W
AA adapter plate	1	055-1430	055-4430	055-2430
BB M6 x 10 mm serrated washer head socket pin screw	4	510-1066	510-2066	510-2066
CC 4 mm security allen wrench	1	560-9646	560-9646	560-9646

Note: Actual parts may appear slightly different than illustrated.

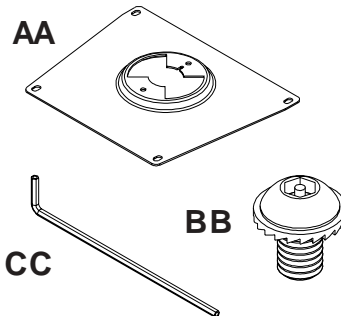

- 1 *Notch indicates front of projector. Flip projector upside down. Fasten adapter plate (AA) using four M6 x 10 mm screws (BB) as indicated below. Tighten screws with 4 mm security allen wrench (CC).

