

IMPORTANT! Read entire instruction sheet before you start installation and assembly.

Before you start check the parts list below to make sure all of the parts shown are included.


⚠ WARNING

- Installer must verify that the ceiling will safely support four times the combined weight of all attached equipment and hardware.

Parts List


Description	Qty.	PAP 233	PAP 233-S	PAP 233-W
AA adapter plate	1	055-1675	055-4675	055-2675
BB M4 x 12 mm socket pin serrated washer head screw	2	510-1079	510-2079	510-2079
CC spacer	2	540-9455	590-0108	590-0108
DD retaining spacer	1	590-2021	590-2017	590-2017
EE thumb screw	1	560-1137	560-7137	560-7137
FF 4 mm security allen wrench (for PAP only)	1	560-9646	560-9646	560-9646

Note: Actual parts may appear slightly different than illustrated.


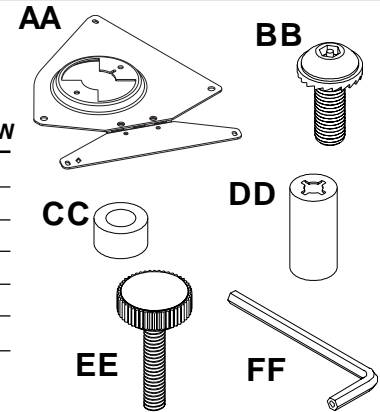


1 Flip projector upside down. Fasten adapter plate (**AA**) using two plastic spacers (**CC**) and two M4 x 12 mm screws (**BB**) with 4 mm security allen wrench (**FF**) as indicated below.

2 *Notch indicates front of projector. Place retaining spacer (**DD**) on remaining hole on projector. Then close adapter plate (**AA**) and fasten with thumb screw (**EE**).

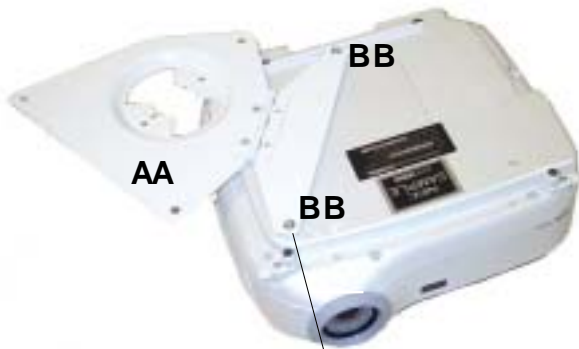

 Plastic spacers (**CC**) go between adapter plate and projector.

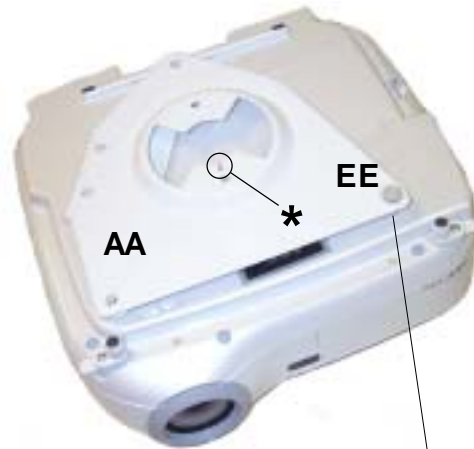Retaining spacer (**DD**) goes between adapter plate and projector.

