

**Installation and Assembly - Projector Adapter Plate for
Panasonic® PT-F100NT, PT-FW100NTU and PT-F100U Projector**

**Models: PAP 298, PAP 298-S,
PAP 298-W**

Before you start check the parts list below to make sure all of the parts shown are included.


IMPORTANT! Read entire instruction sheet before you start installation and assembly.

⚠ WARNING

- Installer must verify that the supporting surface will safely support the combined weight of all attached equipment and hardware.

Parts List

Description	Qty.	PAP 298	PAP 298-S	PAP 298-W
AA adapter plate	1	055-1754	055-4754	055-2754
BB M4 x 20 mm socket pin serrated washer head screw	4	510-1061	510-2163	510-2163
CC retaining spacer	4	590-2020	590-2009	590-2009
DD 4mm security allen wrench (for PAP only)	1	560-9646	560-9646	560-9646

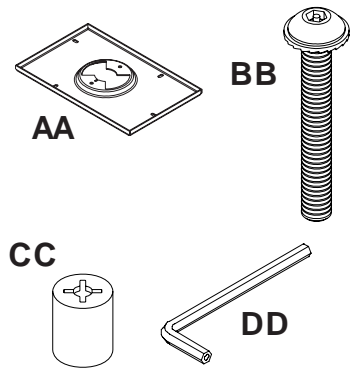

Note: Actual parts may appear slightly different than illustrated.

* Notch indicates front of projector

- 1 Flip projector upside down. Attach adapter plate (AA) using four retaining spacers (CC) and four M4 x 20 mm socket pin serrated washer head screws (BB). Tighten using 4 mm security allen wrench (DD) .

