

Installation and Assembly - Adjustable Depth Adapter Plate for VESA® 200 mm x 100 mm Hole Pattern








Models: PLP VESAPD1
PLP VESAPD1S

IMPORTANT! Read instruction sheet before you start installation and assembly.


Before you start make sure all parts listed are included with your product.

DESCRIPTION	QTY.	PLP VESAPD1	PLP VESAPD1S
AA attachment bracket	1	200-1609	200-4609
BB adapter plate	1	200-1451	200-4451
CC M10 x 15 mm penta-pin™ screw	4	520-9263	520-2176
DD M6 x 12 mm socket pin screw	4	520-1050	520-2050
EE M6 x 20 mm socket pin serrated washer head screw	4	510-9554	510-2554
FF M6 x 30 mm socket pin serrated washer head screw	4	510-1067	510-2067
GG M4 x 10 mm socket pin serrated washer head screw	6	510-1060	510-2060
HH M4 x 12 mm socket pin serrated washer head screw	4	510-1079	510-2079
II penta-pin™ driver	1	520-9260	520-9260
JJ 4 mm security allen wrench	1	560-9646	560-9646
KK washer	6	540-1001	540-1001


Some parts may appear slightly different than illustrated.

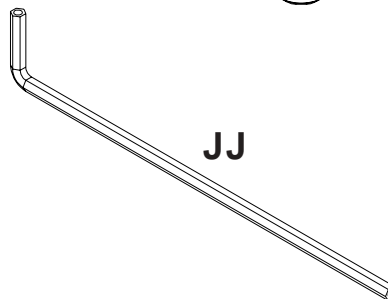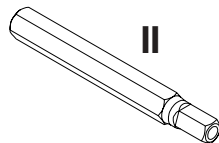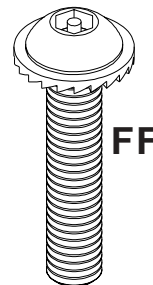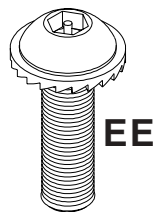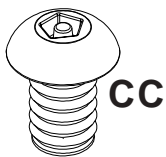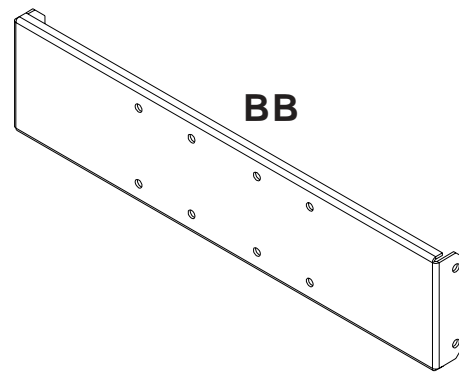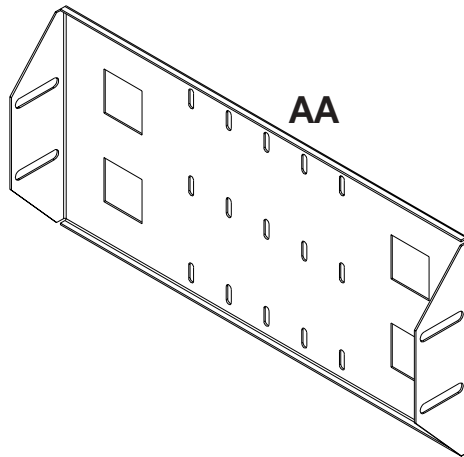

1 Align attachment bracket (**AA**) with the proper holes of LCD screen and secure using four M6 x 12 mm socket pin screws (**DD**) as shown. Tighten M6 x 12 mm socket pin screws (**DD**) using 4 mm security allen wrench (**JJ**). The M6 x 12 mm screws (**DD**) should be tightened to a minimum of four complete revolutions into the threaded insert on the flat panel screen. If a minimum of four complete revolutions cannot be completed, use the next largest available screw - M6 x 20 mm (**EE**).

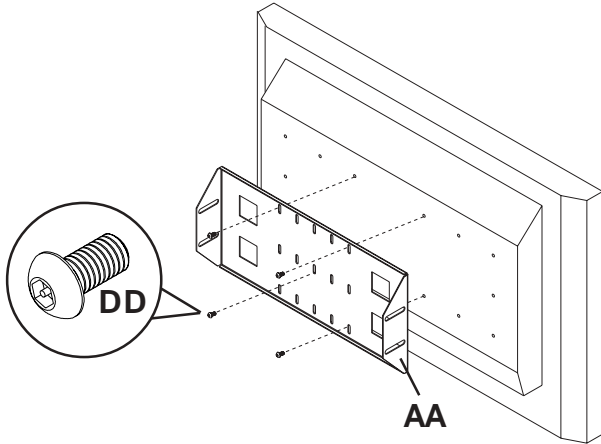

2 Use four M10 penta-pin™ screws (**CC**) to attach adapter plate (**BB**) to attachment bracket (**AA**) as shown below. Tighten screws (**CC**) using penta-pin™ driver (**II**).

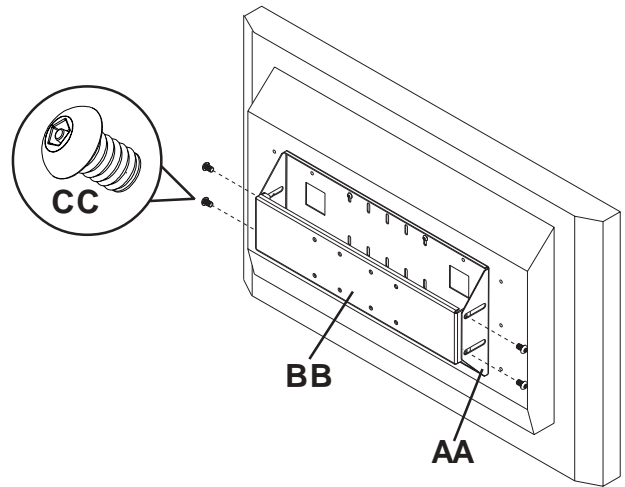

⚠ WARNING

- Do not overtighten! Overtightening may cause permanent damage to the screen. Torque to 26-35 in • lb (30-40 kg • cm).

Figure 1.


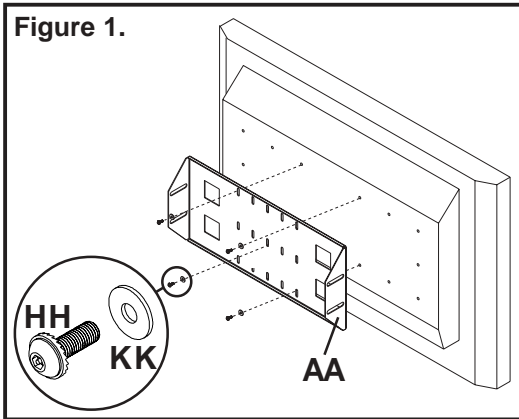


Figure 2.

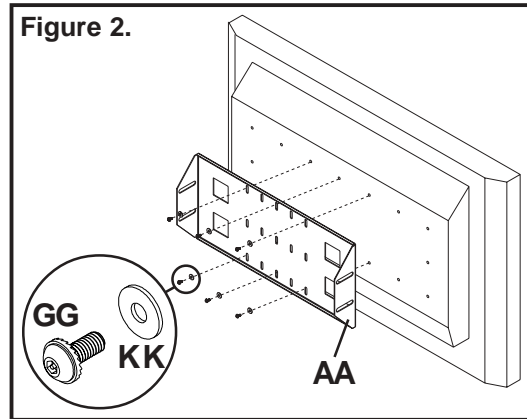

Model	Hardware
• Sharp™ 30" LCD screen model LC-30HV2U	• Use M4 x 12 mm socket pin serrated washer head screws (HH) with washers (KK) in place of (DD) as shown in Figure 1.
• NEC™ 30" LCD screen model LCD3000-BK	• Use six M4 x 10 mm socket pin serrated washer head screws (GG) with washers (KK) in place of (DD) as shown in Figure 2.
• NEC™ 40" LCD screen model LCD4000	• Use M6 x 12 mm socket pin screws (DD)
• Sharp™ 32" LCD screen models LC-32GD4U, LC-32GD6U • Sharp™ 37" LCD screen models LC-37GD4U, LC-37GD6U	• Use M6 x 12 mm socket pin screws (DD)
• Sharp™ 32" LCD screen model LC-32G4U • Sharp™ 37" LCD screen model LC-37G4U	• Use M6 x 30 mm socket pin serrated washer head screws (FF) in place of (DD)
• Sharp™ 37" LCD screen models LC-37HV6U, LC-37HV4U	• Use M6 x 20 mm socket pin serrated washer head screws (EE) in place of (DD)
• Sharp™ 45" LCD screen model LC-45GX6U	• Use M6 x 30 mm socket pin serrated washer head screws (FF) in place of (DD)